



ACCURIST

LONDON

Instruction Guide

IA01

Service and Repairs

Your ACCURIST watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or repair, at our discretion, any defective components free of charge.

IMPORTANT - Not covered by Guarantee

1. Batteries, straps and bracelets.
2. Damage caused by accident, misuse or lack of care.
3. Water penetrations except in watches marked as "Water Resistant".

SERVICING AND REPAIRS UNDER GUARANTEE

Please post your watch, together with the Retailer's Sales Receipt or proof of purchase, the completed Guarantee slip, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will NOT be returned.

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE

Available at a reasonable charge after an estimate has been sent by T.P. (UK) Ltd. Send your watch to us by Registered Post or Recorded Delivery to the address shown.

Important Note

It is important to identify your watch correctly. If, after reading this Instruction Guide, you have any further questions regarding the use, operation or adjustment of your watch, please call us during office hours on 0116 288 2500.

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester
LE18 2EZ
United Kingdom.

Water Resistance

If your watch is water resistant, it will clearly state "Water Resistant" or have a static water pressure indication (e.g. "30/50/100/200 metres") on the dial and/or case back.

If it is not marked as water resistant, it should not be allowed to come into contact with water or be worn in conditions that could expose it to moisture (e.g. washing, heavy rain etc.). Certain chemicals in water may damage the watch seals. To maintain water resistance, we recommend that your watch is serviced and re-sealed at least every 12 months by T.P. (UK) Ltd.

IMPORTANT

Buttons must not be operated while in contact with water.

WATER RESISTANT or RESISTANT TO 30 METRES

Suitable for normal everyday use and will resist exposure to splashes and rain; it is NOT designed to be used whilst bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming.

WATER RESISTANT TO 100 METRES

As 50 metres plus pool side diving and snorkelling, but not high board or scuba diving.

WATER RESISTANT TO 200 METRES

As 100 metres plus scuba diving, but not high board diving.

Operating and adjusting your watch

Your quartz analogue watch is powered by a battery which was inserted at the time of manufacture and will require periodic replacement. New batteries can be supplied and fitted by your nearest ACCURIST stockist.

Quartz analogue watches do NOT require winding.

The button is used for hand/function setting only. When in use, ensure that the button is pushed FULLY IN to position "A". Failure to do so can result in excessive battery drain or damage to the hand setting/date mechanism.

The instructions and diagrams on the following pages are designed to demonstrate the adjustment of all models within our range.

Your watch may not have all of the characteristics shown and may have other buttons and dials in addition to those shown on individual diagrams.

Quartz non-date watch

Time setting:

1. Pull button out to position "B".
2. Advance hands to correct time.
3. Return button to position "A".



Quartz date watch

Date setting:

1. Pull button out to position "B".
2. Turn clockwise or anti-clockwise to set correct date.
3. Return button to position "A".

Note: Do not use this function between 8:30 pm and 1:30 am as the date change cycle is in progress.



Day/date moon phase watch

Moon phase setting:


1. Pull button out to position "B".
2. Turn button clockwise to set correct moonphase (see enclosed leaflet for dates of moonphase).
3. Return button to position "A".

Date correction:

1. Pull button out to position "B".
2. Turn button anti-clockwise to set date.
3. Return button to position "A".

Day/time setting:

1. Pull button out to position "C".
2. Turn hands forwards until correct day and time are reached.
3. Return button to position "A".

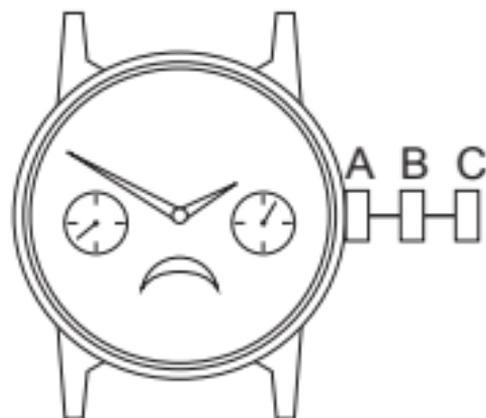

Multiple clasps



Some of our bracelet models are now fitted with a multiple clasp system which is designed to make bracelet adjustment easier for you.

To reduce the size of the bracelet simply open and remove one or both of the adjustable clasps indicated as (A) and (B) on the diagram.

Should you feel that your bracelet is in need of further adjustment, please follow the procedures in Instruction 3 of the bracelet gauge included in this leaflet.

Quartz 3 eye with day-date-24 hour functions

Time/24 hour function setting:

1. Pull button out to position "C".
2. Turn button clockwise to set hour, minute and 24 hour hands to correct time. *When setting the hour hand, be sure to check that the 24 hour hand is set properly. (e.g. 12 Midnight = 24 hrs).
3. Return button to position "A".

Note: When setting the minute hand first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.


Day setting:

1. Pull the button out to position "C".
2. Turn the button clockwise until correct day is shown.
3. Return button to position "A".

Note: Date change takes place between approximately midnight and 5:30 am.

Date (quick change function) setting:

1. Pull button out to position "B".
2. Turn button anti-clockwise to advance date hand to correct date.
3. Return button to position "A".

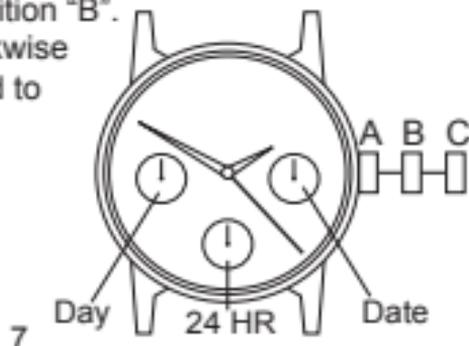

Quartz 2 eye (day & date) watch

Date in right eye date setting:


1. Pull button out to position "B".
2. Turn button clockwise until date changes.
3. Repeat until correct date is shown.
4. Return button to position "A".

Date in left eye time setting:

1. Pull button out to position "C".
2. Turn button to advance hands.
3. Return button to position "A".

Day/date setting:

1. Pull button out to position "B".
2. Turn button anti-clockwise to set correct DAY.
3. Turn button clockwise to set correct DATE.
4. Return button to position "A".

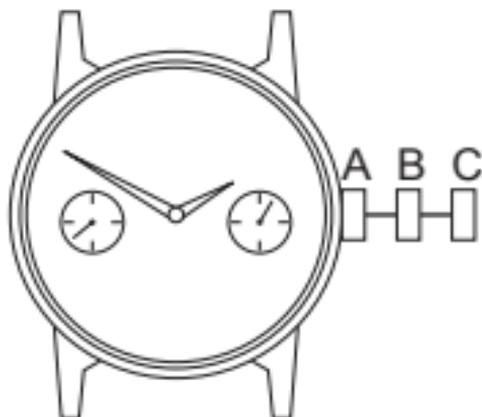


Quartz 2 eye (month & day) with date watch

Day & time setting:

1. Pull button out to position "C".
2. Turn button to advance hands until day changes; repeat until correct day and time is shown.
3. Return button to position "A".

Date & month setting:

1. Pull button out to position "B".
2. Turn button clockwise until month changes (every 31 days).
3. Repeat until correct month and date are shown.
4. Return button to position "A".

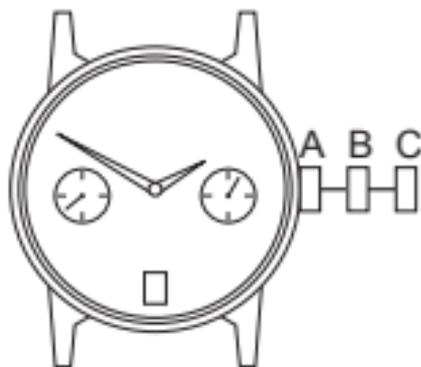

Quartz 2 eye (day & date) watch

Important - The position of the day/date "eyes" referred to in these instructions MAY BE REVERSED on certain models.

Date in right eye - Day and time setting:

1. Pull button out to position "C".
2. Turn button to advance hands until day changes; repeat until correct day and time is shown.
3. Return button to position "A".

Quartz day/date watches

Time setting:

1. Pull button out to position "C".
2. Advance hands to correct time.
3. Return button to position "A".

Day/date setting:

1. Pull button out to position "B".
2. Turn clockwise or anti-clockwise to set correct date.
3. Turn clockwise or anti-clockwise to set correct day.
4. Return button to position "A".

Note: Days of the week can be set in English or Spanish. Once set the watch will automatically indicate the day in the chosen language.

Note: Do not set day/date between 8:30 pm and 5:00 am as day/date change cycle is in progress.



Quartz 3 eye chronograph with date

Time/date setting:

- See instructions on pages 4 & 5.


Operating chronograph:

1. Push PB1 to start/stop chronograph.
2. Push PB2 to reset.

Chronograph zero reset:

1. Pull button out to position "C".
(Chrono seconds hands return to zero position).
2. Push PB1 to set chrono second hand to 12.00 (zero) position.
3. Return button to position "A".
4. Push PB2 to set chrono minute to 12.00 (zero) position.

Hand displays

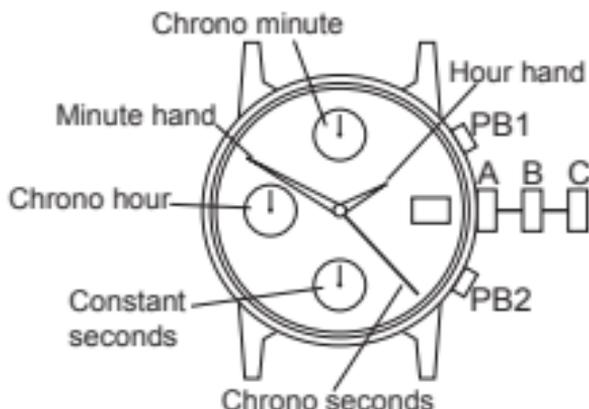

Note: This hand should be at zero (12 o'clock position) when chrono is not in use.